CABINET PARTS

29"ELECTRIC DRYER

For Models: LER8648LQ0, LER8648LW0, LER8648LG0
(Designer White) (White/Grey) (Biscuit/Gold)

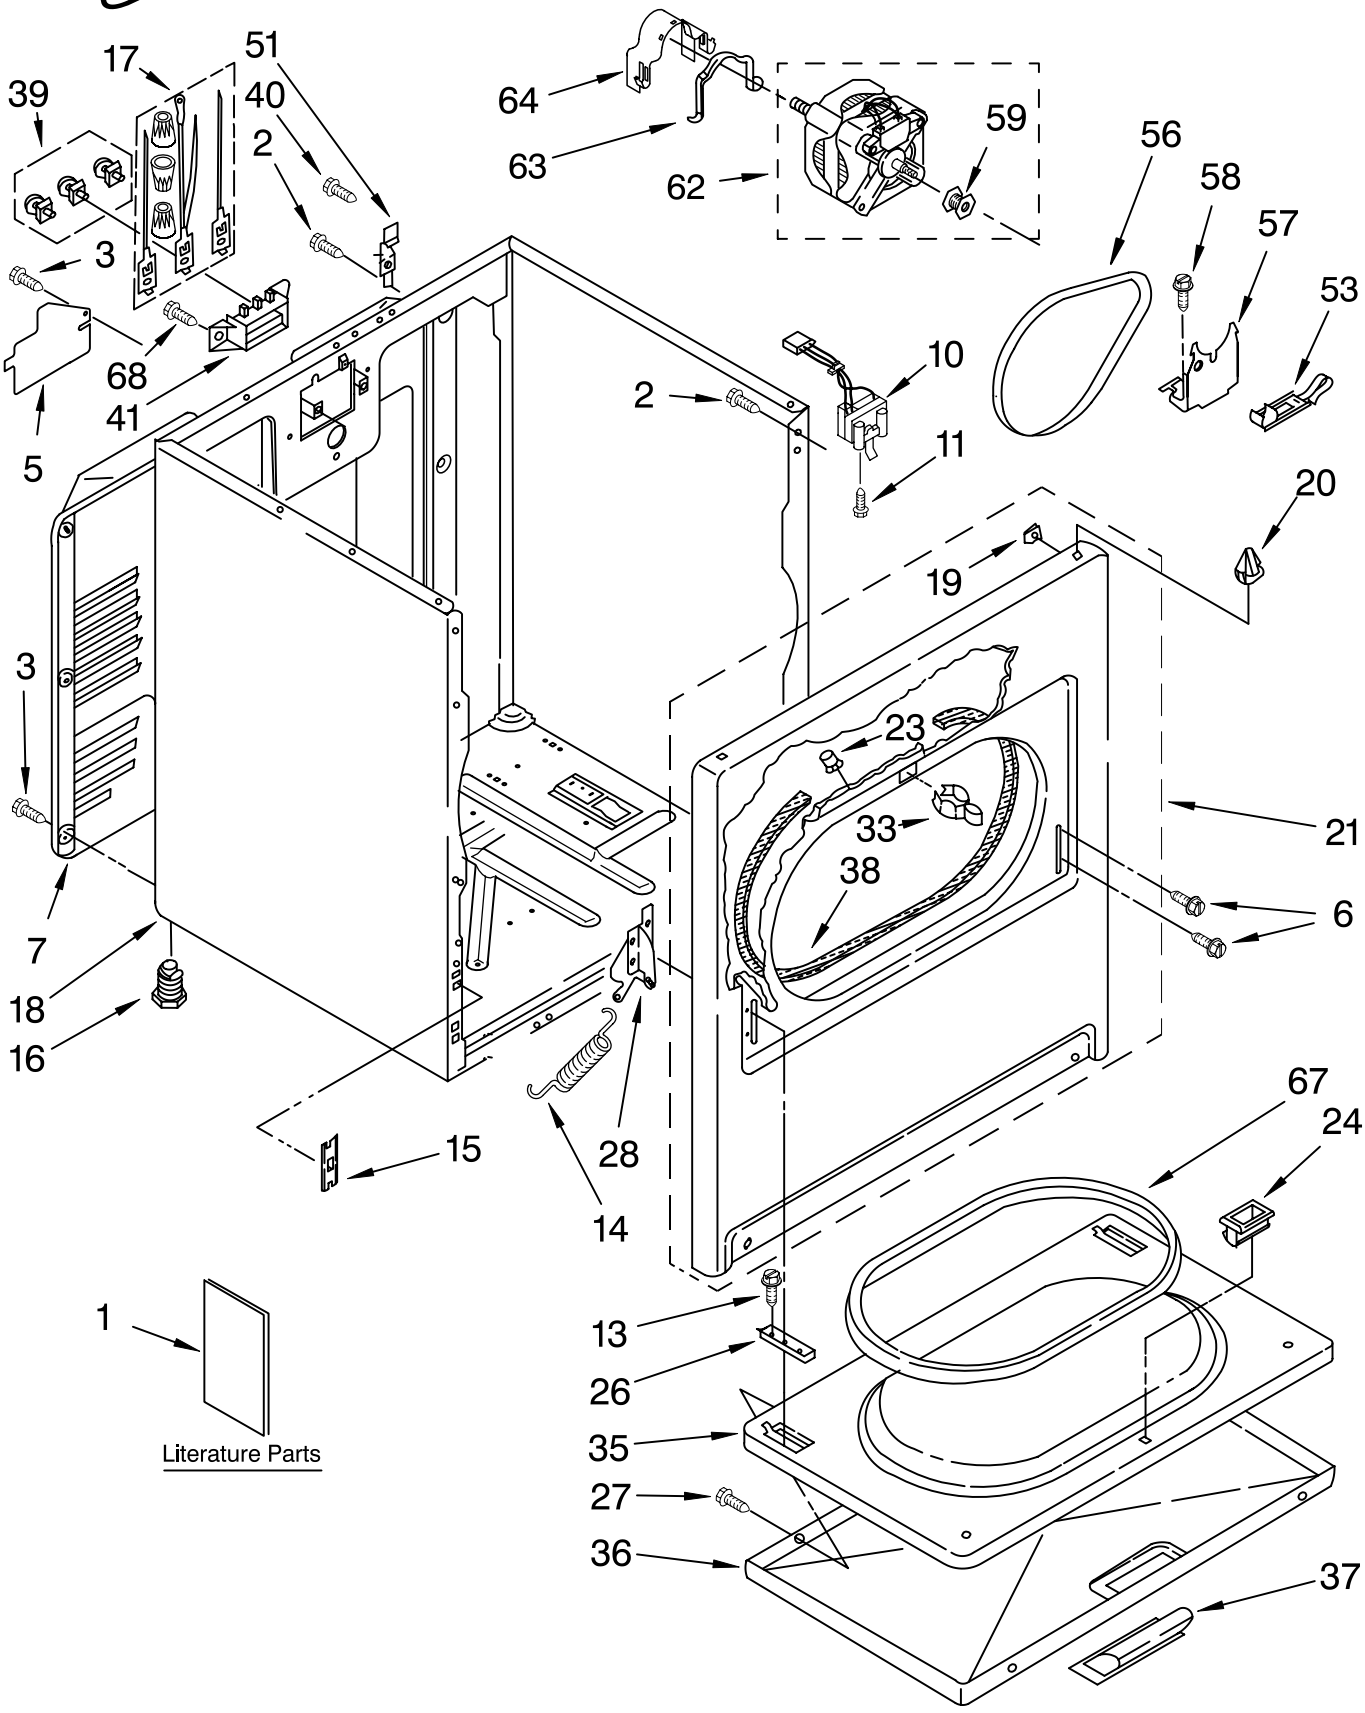

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CABINET PARTS

For Models: LER8648LQ0, LER8648LW0, LER8648LG0
(Designer White) (White/Grey) (Biscuit/Gold)

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	LIT8535829	Instructions, Installation
	LIT8522243	Use & Care Guide
	LIT3979703	Label, Wiring Diagram

Following May Be Purchased

DO−IT−YOURSELF REPAIR MANUALS

	LIT677818	Dryer
2	343641	Screw, 10−16 x 1/2
3	693995	Screw, 8−18 x 3/8
5	3396795	Cover, Block
6	342043	Screw, 10−32 x 3/8
7	3396805	Panel, Rear
10	3406107	Door Switch Assembly
11	697773	Screw, 6−20 x 7/8
13	3357011	Screw, 10−16 x 1/2
14	692495	Spring, Door (2)
15	3394083	Clip, Front Panel (2)
16	3392100	Foot, Dryer
	279810	Foot−Optional (Extended Length Package of 2) (Not Included)
17	279318	Terminal, Tinned & Brass (3) (Includes Illus. 39)
18		Cabinet
	8530603	White
	8530606	Biscuit
19	98234	Clip, Ground
20	690363	Lock, Front Top (2)
21		Panel, Front
	695620	White
	3977244	Biscuit
23	685203	Clip, Felt Pad (3)
24	3389441	Catch, Door Assembly
26	337189	Clip, Hinge (2)
27	694091	Screw, 8−18 x 3/8
28	8066056	Hinge, R.H.
	8066057	Hinge, L.H.
33	696144	Strike, Door
35	695737	Door, Rear
36		Door, Front
	3393549	White
	3977241	Biscuit
37		Handle, Door
	690270	White
	3977242	Biscuit
38	3406129	Seal & Bearing Assembly
39	279393	Terminal Block Kit (For Terminal Block)
40	697776	Screw, 10−32 x 5/8
41	3397659	Block, Terminal
51	238088	Hinge, Top (2)
53	3394332	Idler & Slide Assembly
56	8066065	Belt, Drive
57	348780	Base, Motor
58	3400500	Bolt, 5/16−18 x 3/4
59	3394341	Pulley, 60 Hz.
62	661654	Motor Assembly 60 Hz.
63	660658	Clamp, Motor
64	3404162	Clamp, Motor (W/Shield)
67	3390731	Seal, Door
68	3393008	Screw, 10−16 x 1/2

TOP AND CONSOLE PARTS

For Models: LER8648LQ0, LER8648LW0, LER8648LG0
(Designer White) (White/Grey) (Biscuit/Gold)

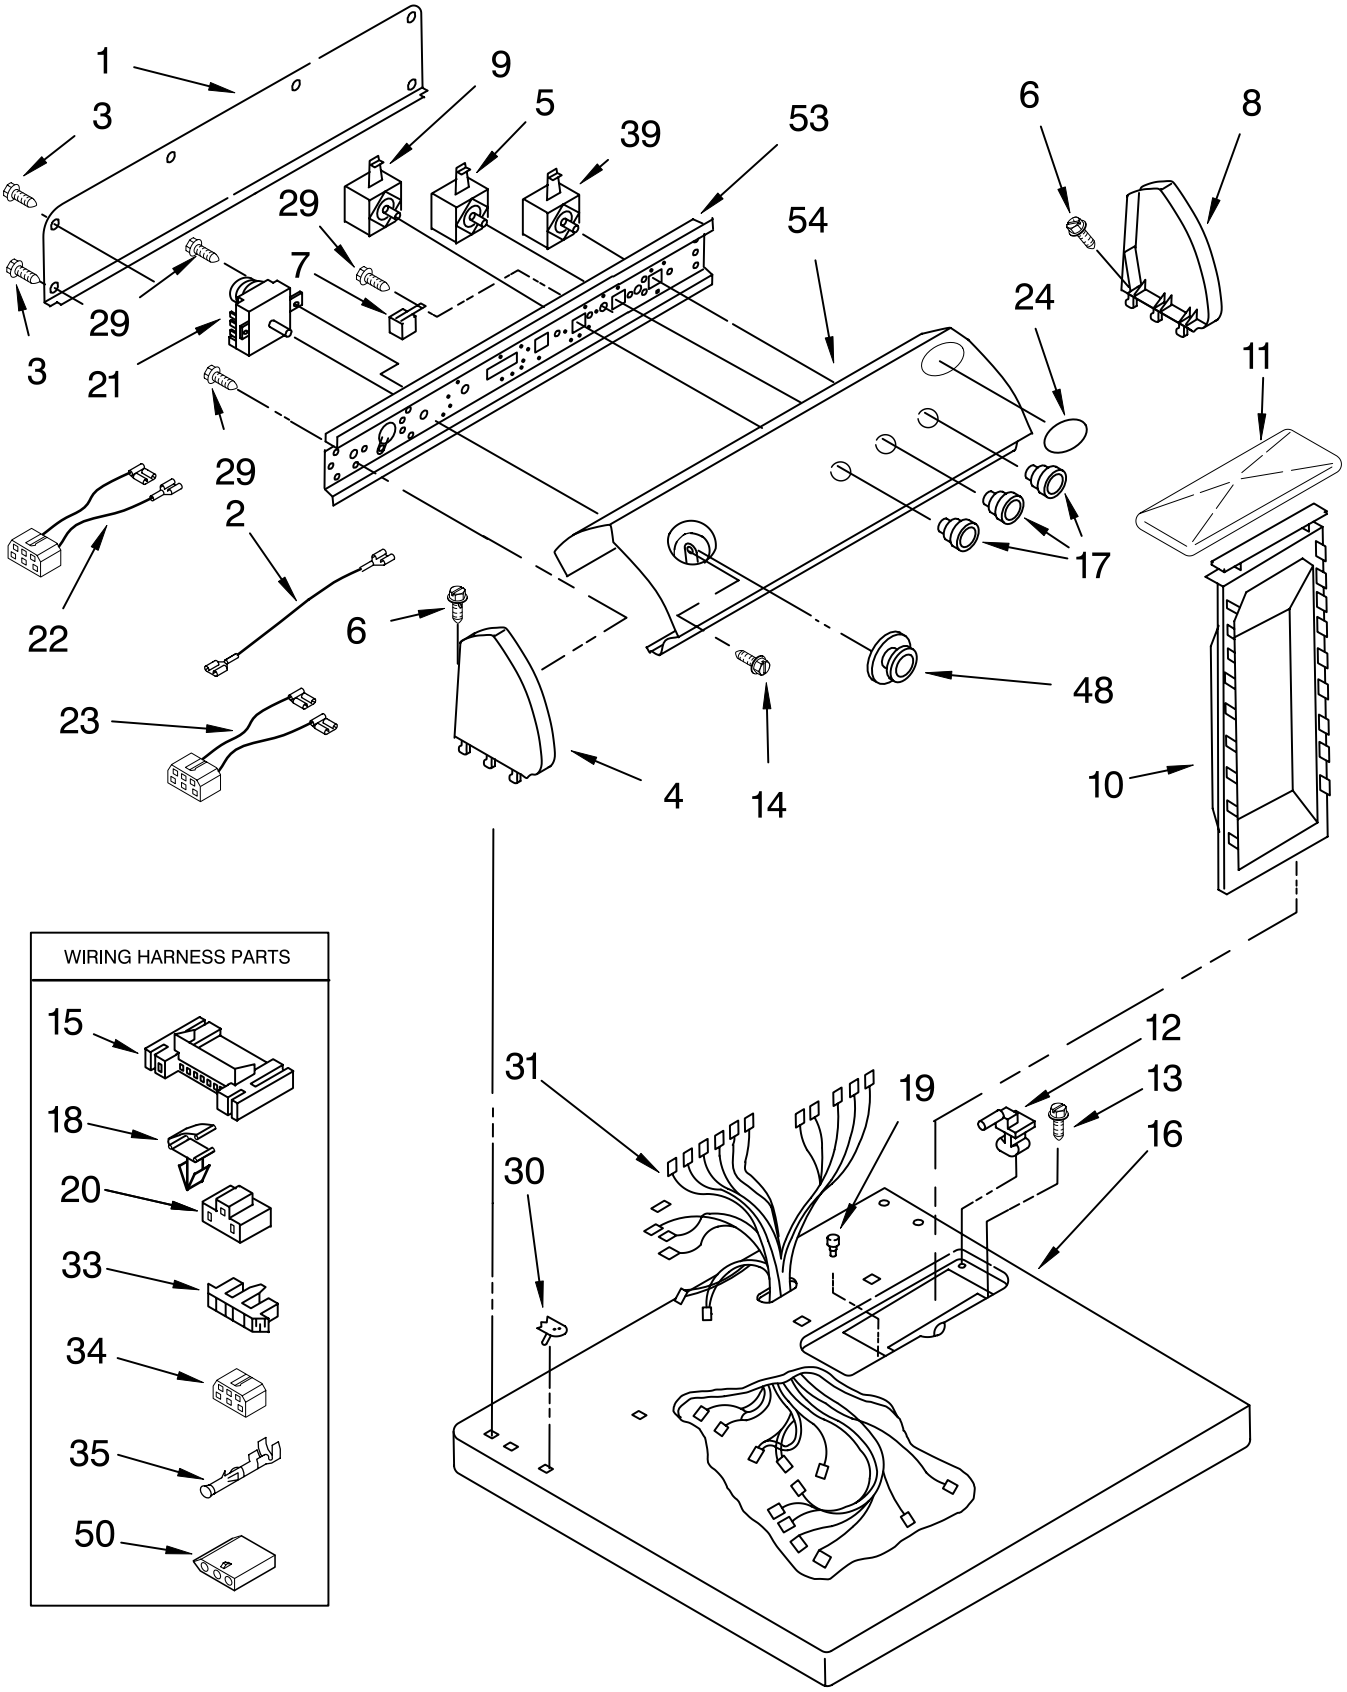

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TOP AND CONSOLE PARTS

For Models: LER8648LQ0, LER8648LW0, LER8648LG0
(Designer White) (White/Grey) (Biscuit/Gold)

Illus. No.	Part No.	DESCRIPTION
1	8274261	Panel, Rear Console
2	3401684	Wire, Jumper (Black)
3	693995	Screw, Hex Head
4		Cap, End (L.H.)
	8271365	White
	8271368	Biscuit
5	3405156	Switch, Wrinkle Shield
6	388326	Screw, Console
7	694419	Buzzer, Mini
8		Cap, End (R.H.)
	8271359	White
	8271362	Biscuit
9	3399639	Switch, Temperature
10	349639	Screen, Lint
11		Cover, Lint Screen
	8283378	White
	8283380	Biscuit
12	3978605	Hinge, R.H.
	3978606	Hinge, L.H.
13	688983	Screw, 8−18 x 5/8
14	3400859	Screw, Grounding
15	3395683	Connector (Motor)
16		Top
	8271390	White
	8271392	Biscuit
17		Knob, Control (3)
	8271339	(For LER8648LQ0)
	8316540	(For LER8648LW0)
	8316545	(For LER8648LG0)
18	3394427	Clip−Harness
19	297535	Bumper, Lint Lid
20	3401144	Connector, (PTS Relay)
21	3979618	Timer, 60 Hz.
22	3397695	Wire, Jumper (Guard On/Off)
23	3396029	Wire, Jumper (Temperature)
24	3955775	Medallion
29	3390646	Screw, Mounting (8−18 x 5/16)
30	357213	Nut, Push−In (2)
31	8299873	Harness, Wiring
33	3397269	Connector (Timer)
34	3347243	Connector 6−Circuit
35	94614	Terminal
39	3398095	Switch, Push−To−Start
48		Timer Knob Assembly
	8312687	(For LER8648LQ0)
	8316538	(For LER8648LW0)
	8316549	(For LER8648LG0)
50	3936144	Connector
53	8271418	Bracket, Control
54		Panel, Control (Includes Illus. 24)
	8532627	White
	8532643	Grey
	8532628	Gold

OPTIONAL PARTS (NOT INCLUDED)

Illus. No.	Part No.	DESCRIPTION

ACCESSORY PARTS

279948	Kit, Dryer Repair
3406839	Dry Rack
8522199	Kit, Dryer Vent Testing

PAINT, TOUCH−UP (1/2oz.)

72017	White
4392899	Biscuit

PAINT, PRESSURIZED SPRAY (12 oz.)

350930	White
4392901	Biscuit
350938	Primer, Gray

PAINT, BULK (1 qt.)

799344	White (Uncut)
4392900	Biscuit(Uncut)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

BULKHEAD PARTS

For Models: LER8648LQ0, LER8648LW0, LER8648LG0
(Designer White) (White/Grey) (Biscuit/Gold)

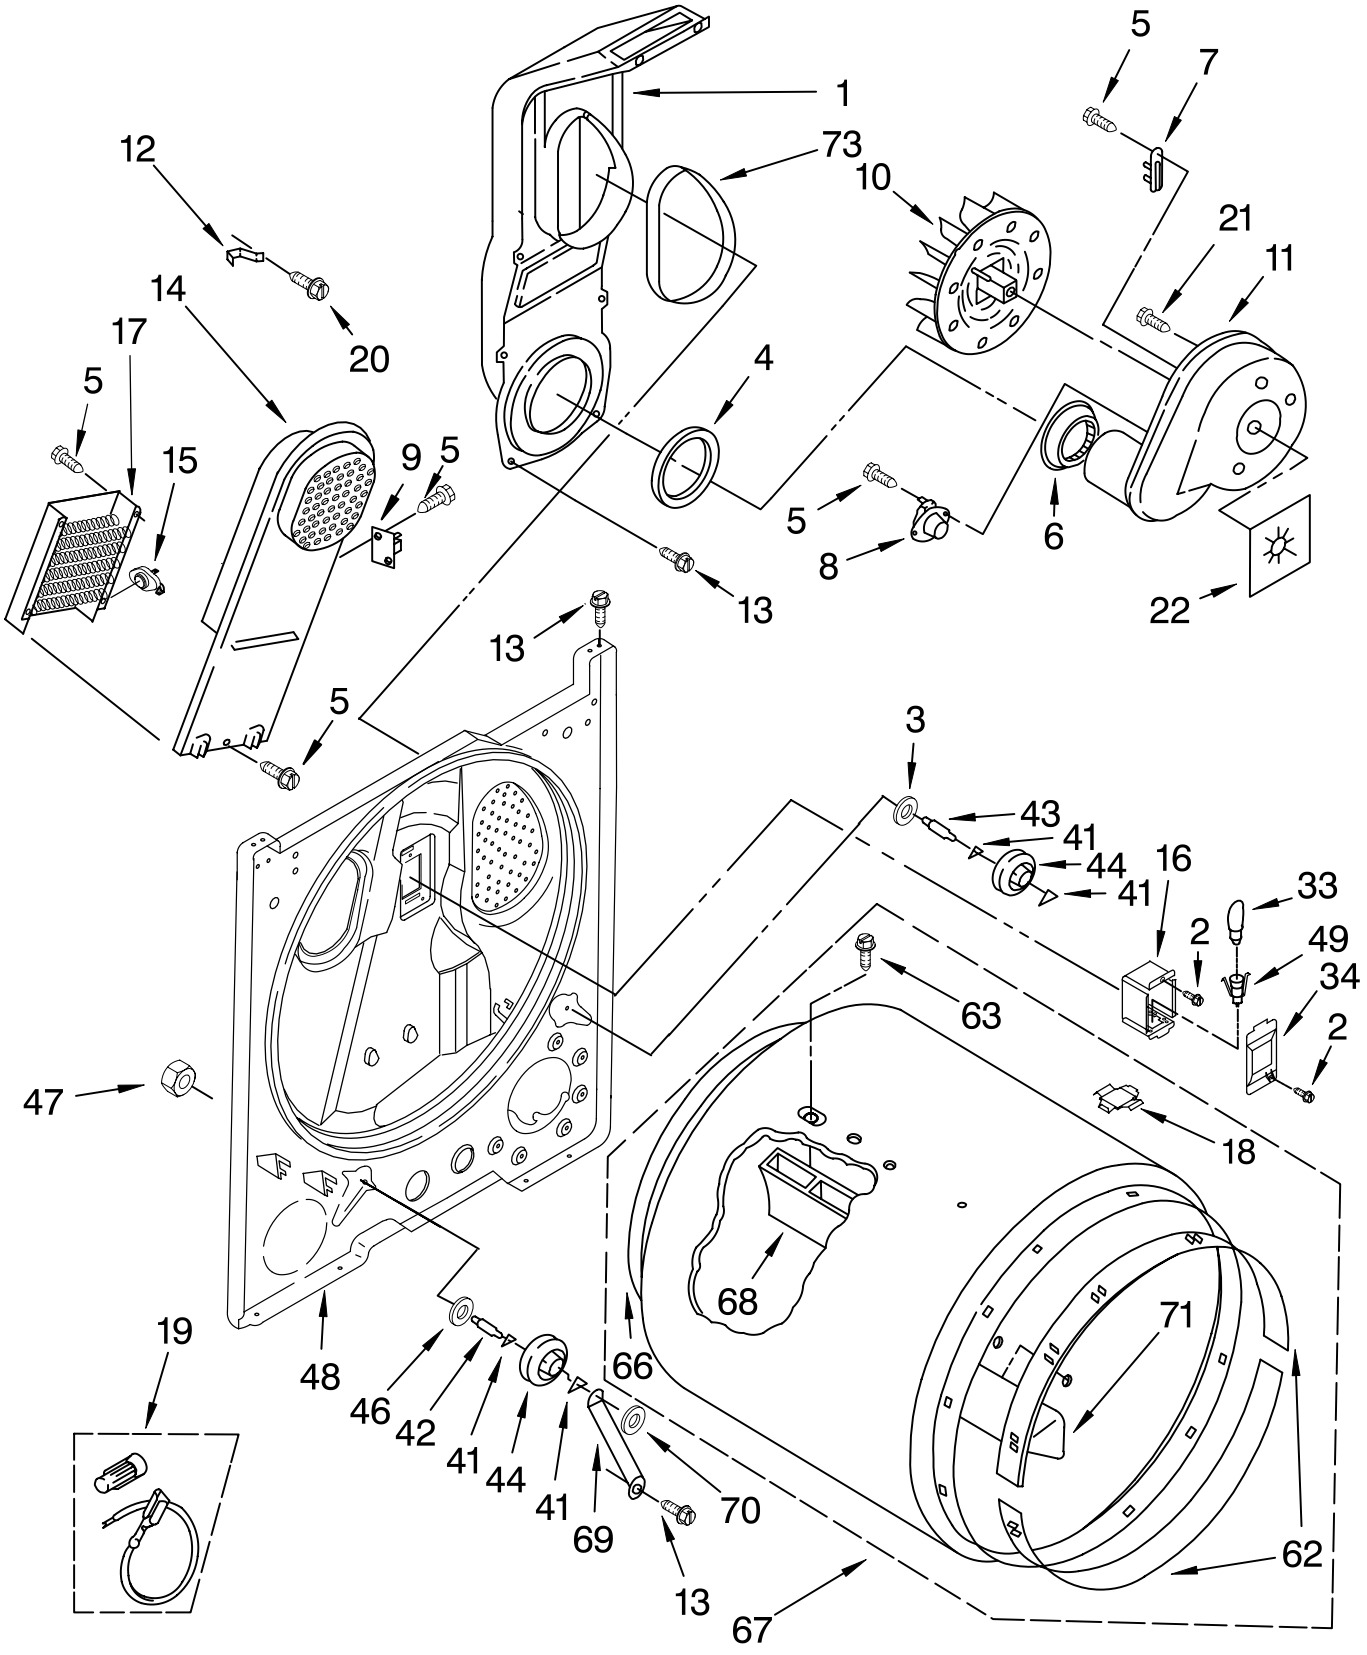

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

BULKHEAD PARTS

For Models: LER8648LQ0, LER8648LW0, LER8648LG0
(Designer White) (White/Grey) (Biscuit/Gold)

Illus. No.	Part No.	DESCRIPTION
1	348368	Lint Chute Assembly
2	487909	Screw, 8−15 x 1/2
3	3388703	Washer−Support
4	347139	Seal, Lint Chute
5	90767	Screw, 8−18 x 3/8
6	696302	Shield, Exhaust
7	3392519	Thermal Fuse
8	3387134	Thermostat, Internal−Bias
9	3977393	Thermal Cut−Off (Includes Illus. 15)
10	694089	Wheel, Blower (Includes Illus. 22)
11	3405016	Housing, Blower
12	3398161	Clip
13	343641	Screw, 10−16 x 1/2
14	3397566	Box, Heater
15	3977767	Thermostat, 221°F (105°C)
16	3977373	Bracket, Drum Light
17	3403585	Element, Heater
18	8066086	Drum Hole Plug
19	279457	Wire Kit, Terminal (For Heater Element Wiring Harness Repair)
20	489463	Screw, 8−18 x 5/8
21	3390647	Screw, 8−18 x 1/2
22	3394196	Seal, Blower
33	3406124	Bulb
34	3402841	Lens, Drum Light
41	690997	Ring, Tri
42	3399506	Shaft, L.H.
43	3399507	Shaft, R.H.
44	3397588	Roller, Support
46	348197	Washer, Support
47	3359452	Nut, 3/8−16
48	3403413	Bulkhead
49	3403634	Socket Assembly
62	692526	Ring, Bearing (2)
63	97787	Screw, 11−16 x 3/4
66	3406130	Seal, Rear Drum
67	695587	Drum Assembly
68	692490	Baffle, Drum (2)
69	3976434	Bracket, Support
70	90296	Clip
71	3403636	Baffle, Drum (1)
73	339956	Seal